

## To Change a Ceramic Heater – Unplug sauna!



**1. Remove screws from heater guard**

**2. Remove heater guard**



**3. Unscrew ceramic cap from top**

**4. Ceramic cap shown removed**



**5. Remove ceramic wire guard**



**6. Use pliers or small wrench to remove nut.**



**7. Nut shown removed**



**8. Remove wire from top of heater**





**9. Repeat 3-8 at bottom of heater**



**10. Remove spring clip shown here**



**11. Spring clip shown removed**



**12. Pull ceramic heat forward at bottom.**



**13. Drop heater down through top hole**

**14. Heater removed**

**Reverse above steps to install new heater.**